

# TankScan TSC

## Setup Instructions

**TankScan** | Powered by AquaPhoenix

### Required Equipment

- Automatic Tank Gauge (ATG) with available RS-232 connection port
- TankScan TSC (shipped from AquaPhoenix)
- TSC to ATG cable/adaptor as needed for ATG model
- If additional parts or assistance is needed contact TankScan Technical Support @ 877-847-7226.

**NOTE: If no RS-232 connection port is present please contact your local petroleum equipment supplier or contact TankScan Technical Support.**

- Internet router or switch with available channel/port

**NOTE: If all channels are in use, a low-cost Ethernet switch can be purchased to expand your number of inputs.**

### Recommended Tools

- Phillips or standard screwdriver
- Small mounting screws, #6 x 1/2 or similar, for TSC mounting if desired

### Install TSC

Identify best location for the TSC so it can be easily seen and accessed for troubleshooting purposes. Typically this is nearby the ATG. Locate your TSC and prepare it for installation.

- 1** Assemble power supply by sliding plug piece into the power supply body until it snaps into place.
- 2** Mount the TSC within length of the supplied serial cable.

**TankScan Technical Support**  
**877-847-7226**



### Contents



# TankScan TSC

## Setup Instructions

**TankScan** | Powered by AquaPhoenix

### Install TSC (continued)

- 4 Connect provided serial communications cable from ATG to TSC.
- 5 Plug in one end of Ethernet cable to TSC port.
- 6 Route cable to Internet router and connect to an open port.

### Verify/Change ATG Serial Communication Settings

ATG must be configured to the following communications port settings. Consult your ATG instruction manual for specific configuration instructions.

9600 baud  
Parity = Odd  
1 stop bit  
7 data bits


### Power-up TSC

- 1 Insert the TSC power connector until fully seated. Be sure to align locking ears and engage plug in socket fully.
  - Status light will be solid GREEN at first. Once local network has assigned an IP address, light will change to flashing GREEN.
- 2 Ethernet light will normally be GREEN indicating connection to network. Serial port light will normally remain AMBER changing to GREEN when ATG data is being transmitted to TankScan AIP.

### PHYSICAL INSTALLATION IS COMPLETE.

**TankScan's Technical Support must be contacted to complete tank setup.**

- 3 Provide MAC address to CCT.

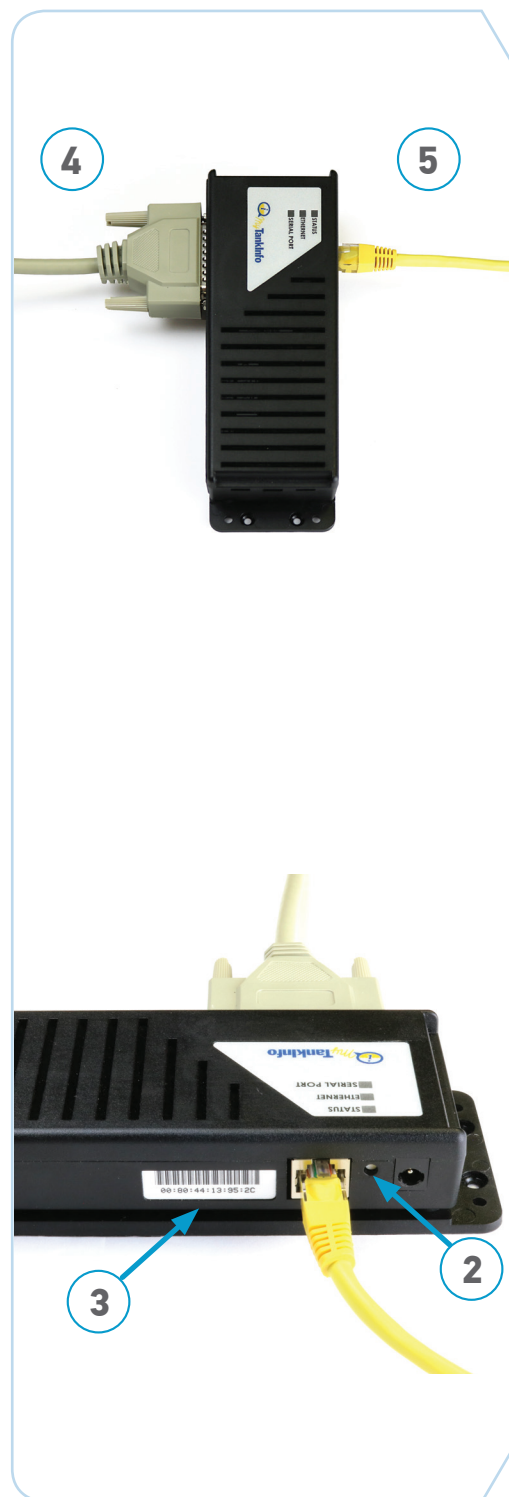

**TankScan Technical Support**  
**877-847-7226**

223-0186-000 Rev. C 9/15/2026

AquaPhoenix Scientific  
860 Gitts Run Road  
Hanover, PA 17331

PH: 877-847-7226

[www.tankscan.com](http://www.tankscan.com)



©2026 AquaPhoenix. All Rights Reserved. TankScan images and marketing materials are protected by various patents, copyrights and trademarks. AquaPhoenix assumes no responsibility for any errors which may appear in this document, reserves the right to change device or specifications without notice, and does not make any commitment to update the information contained herein. No licenses, patents or other intellectual property of AquaPhoenix are granted by the Company in connection with the sale of TankScan products, expressly or by implication.